 




TruWITNESS Wearer's Quick Guide

1. TruWITNESS SENSORY

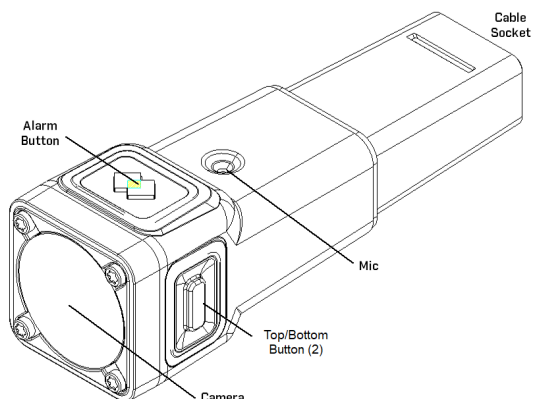

The Wearable Sensory includes:


- Hi-Res Camera
- User controls
- User and Ambient Microphones
- Speaker
- Gyroscope, Accelerometer
- Optional attachment hardware, giving flexible wearer options.

Sensory Controls

ALARM FLIR Logo Button (Long Press)		EVENT FLIR Logo Button (Short Press)
		Privacy On/OFF Top/Bottom together

2. TruWITNESS PCS

 (Power/Communications/Storage Unit)

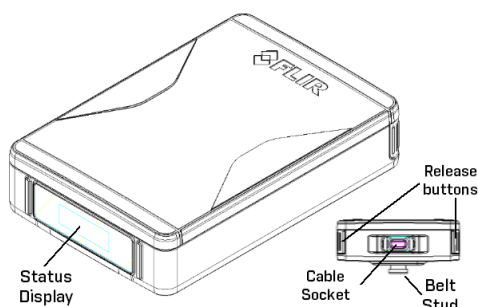


The Power/Communications/Storage Unit shows:

- Status Display (OLED)
The PCS display shows the User the unit's key status indicators
- Battery level, Communications status,
On-board Recording status
- Battery Condition
- when below 5% the user will also get a 'low battery' message
- Communications Status
- shows 3G/4G status
- Recording status
- The PCS records continuously (even when in Live mode),
except when the user sets it to 'Privacy'
- Text Message
- The default message shows the User Name.
Other Status messages listed overleaf.


3. Mounting Hardware

 Safety Glasses




Vest/Epaulette

 Collar/Cap



1/4" - 20 Fixed

 4. 'L' and 'T' Cables

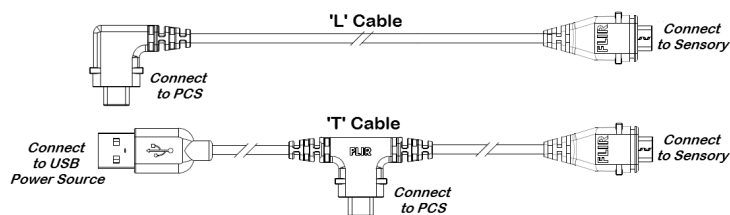

Note: For T cables, power source with 1.8A to 2.5A should be used (no less than 1.8A) – DO NOT CONNECT TO PC USB – USE A DEDICATED POWER SOURCE

Attaching Sensory to Mount

1. Plug the cable into the Sensory.
2. Slide the sensory into the mount with the bottom toward the release clip (1)
3. Push until there is a click

The mounts use a universal mounting clip, making the process the same for all types.



Note: When mounted, the cable cannot be detached from the sensory unless removed from the mount

Detaching Sensory from Mount

1. Pull the release clip out, away from the sensory (1)
2. Push the sensory from the bottom in the direction of the lens

Wearing your Sensory

***Left or Right?** The Sensory knows which way is 'up'.

All mounting hardware can be rotated, and therefore can be used on either the left or right side of the body / head / glasses

- Always mount the Sensory with the Alarm button facing outwards.

Glasses

Cap

Shoulder



Using your *SENSORY* and *PCS*



Note: Sensories are assigned to specific users at an Assignment Station, so that all recordings are always directly associated with that user.

You should always use the specific Sensory that is currently assigned to you.

1. Before first use insert PCS into charging hub until fully charged.
2. Get a charged PCS from a Charging Hub.
3. Connect the Sensory to the PCS.
Always clamp (or release) the cable from the PCS by pressing the Cable Release buttons.
 - The 'L' cable is normally used to attach to the PCS when wearing the Sensory.
 - The 'T' cable is for when a Sensory is used as a fixed-mount device, or when external power is needed (via the large USB connector).
4. The Sensory and PCS will go through a startup cycle as soon as they are connected.
Wait for the version number and your User Name to appear on the PCS screen - this indicates that the unit is assigned to you, is ready to use, and on-board recording has commenced.
5. If you get a message 'Return PCS to Hub' on startup, do not use that PCS - it needs to be fully recharged and its recordings uploaded. Return it and request a different PCS.
6. While using the unit, you can trigger Alarms, and put the unit in Privacy mode.
The sensory controls are shown overleaf.

Text Messages

Message	Meaning	Message	Meaning
Alarm Alarm End	Long press on Alarm button starts an Alarm. Repeat to end Alarm. <ul style="list-style-type: none">- Alarm raised in Control Center.- Control Center starts recording.	Privacy	(To enter Privacy Mode, press both the Top & Bottom buttons while in normal mode) (Repeat to end Privacy Mode) Privacy mode reminder: HH:mm (Shows every 5 mins while in Privacy Mode) Shows time Privacy Mode was started
Event Event End	Short press on Alarm button starts an Event. Repeat to end Event. <ul style="list-style-type: none">- Event created without Alarm- Control Center starts recording	Low Power	Battery is <2% - Recording will continue but Live viewing via Cloud connection suspended If charging commences using 'T' cable, message still remains until unit is charged back to 25%
Neighbor Event	User is in range of an Alarm from another User. PCS will vibrate.	Return to Hub	PCS need to be returned to Charging hub to update or resolve internal error.
Not Assigned	Sensory has not been assigned to a user		

Notes:

1. The PCS handles storage and communications, but when the video from the Sensory is shown live or played back later on the VMS, it remains associated with the assigned User.
2. Users can even use a replacement PCS's during a shift - for example, if their first PCS is low on battery. The VMS system will correctly identify and splice the recordings from multiple PCSs.
3. Where activated by the system, each user will get an email for each Alarm or Event containing the related recordings, so that they can be reviewed.
4. Always allow up to 10 seconds at the end of an event before disconnecting the PCS from the Sensory
5. Take Unit out of Privacy mode prior to disconnecting PCS and inserting into Charging Hub. Failure to do so will result in Hub showing a steady amber light for that PCS until it is defaulted (all data will offload and will charge as normal)